
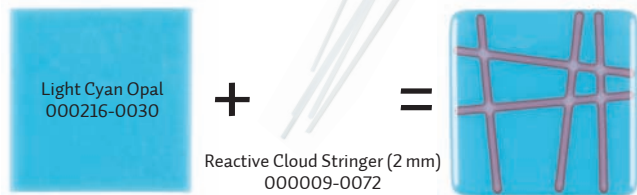
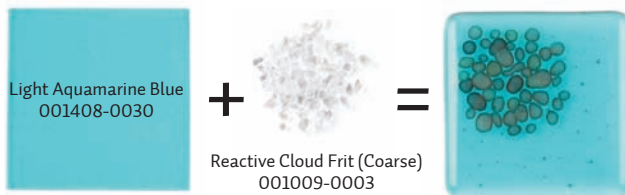
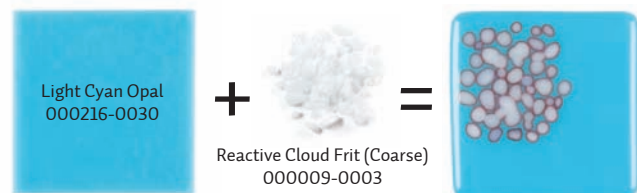
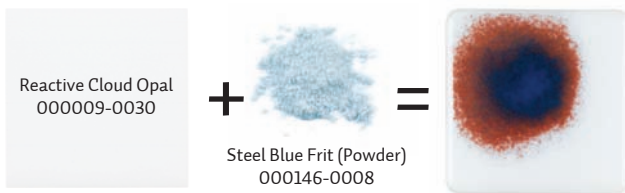


⊕ Get a Reaction

Try fusing samples of Reactive Cloud Opal and Reactive Ice Clear with our copper-bearing glasses or copper leaf or silver foil. Their chemistries may react at the interface, resulting in special colors and effects. Reactions range from subtle to dramatic and can prove quite versatile in art and design.

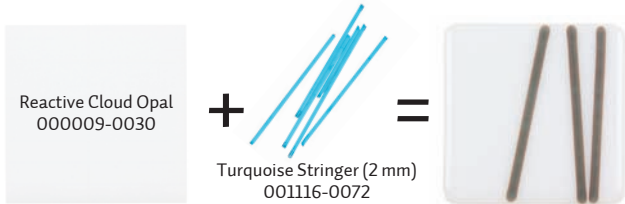

Layups: 6mm stacks (3 mm clear base + 3 mm reactive sheet), -0003 frit, 2 mm stringer, -0008 powder, Silver Foil
Process temp: 1490°F (810°C)

Identify Bullseye's copper-bearing styles by reading product descriptions for individual glasses on bullseyeglass.com.

To learn more about glass reactions, see our online video kilnforming lessons. Or download instructions for this Make It: Linear Reaction plate at bullseyeglass.com/education.

